


Removal

- 1 Remove combination switch.

- 2 Remove switch (1) from combination switch (2).

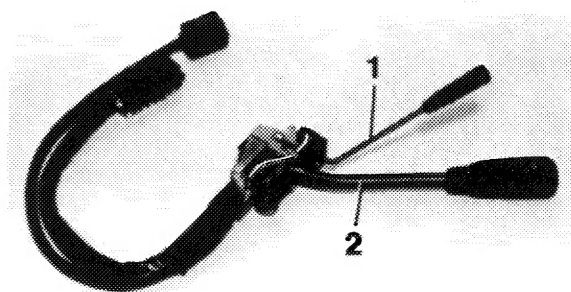

154 - 11976/1

Installation

- 3 For installation proceed vice versa.

- 4 Perform function test on road.